


## DISENGAGING & RE-ENGAGING THE GEARBOX

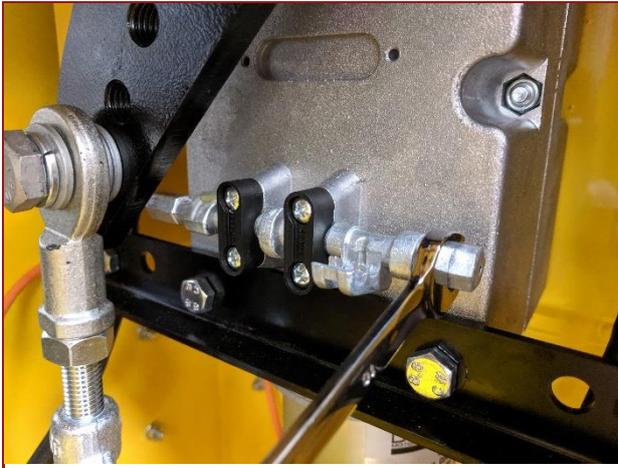

Disengage the gearbox with a 10mm spanner to allow free movement of the spring arm.


Apply the spanner to the control knob as shown.

Needed:

10mm spanner



This image shows the gearbox disengaged

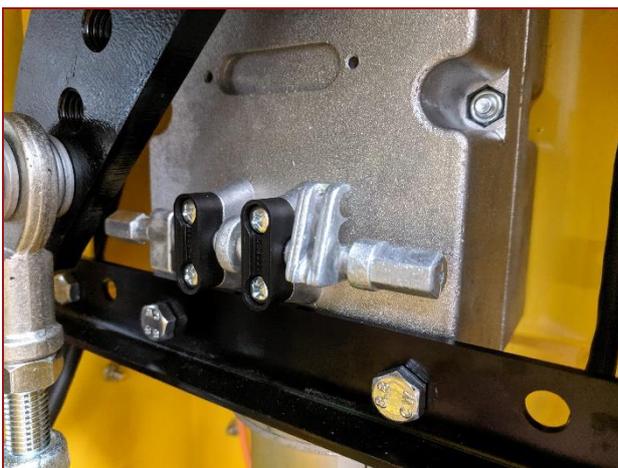

This image shows the gearbox engaged